

VOX-3000 OPERATION MANUAL



Congratulations on the purchase of your VOX 3000 talking scale.

For any assistance contact: **Industrial Weighing Systems**

Ph: 613-786-0016 E-Mail info@iwsystems.ca

You can also visit us at www.iwsystems.ca

Technical Specification

Maximum Loading : 3000 grams or 6lb 10oz

Resolution : 1 gram or 0.1oz

Power : 9V Battery

Battery Installation

1. Press and push open the battery cover located at the bottom of the unit.
2. Insert one 9V size battery matching the (+) and (-) polarity covers with the battery. Close the battery cover until it clicks shut.

Note : If the battery symbol appears in the display, it means low battery power. It is time to replace the battery. If the power is too low, it will show "Lo" when powered on and then it will turn off automatically.

Weighing Function

1. Turn the scale on by pressing the "ON" button. It will say "Hello!" Once the platform is stable, it will say "I'm ready" and display "0g".
2. Place the item to be weighed onto the scale platform. The weight will be displayed and spoken when the reading is steady.
3. There is a stability indicator "H" in the top left corner of the screen. Whenever the weight is stable, the "H" will be displayed before the voice reading.
4. Turn the scale off by pressing the "OFF" button. It will say "Good-bye".

Note : Do not exceed the weighing capacity of the scale. You can cause permanent damage and void the warranty. The scale will give the warning "Beep, beep," and show "ERR" if it is trying to weigh above its capacity.

The voice reading function only will read out a change in weight if that change is greater than 5 grams.

To select oz or gram

Use the g/oz button to select the desired unit.

To use TARE Function

Turn on the scale. Place the empty container on the weighing platform. Press the "TARE" button. Place the items to be weighed into the container. The exact weight of the items will show.

To add the weight value

Press "TARE" to zero the value of the last weighing item before adding the next item being weighed. You can repeat this procedure as according to how many items you have.

Note : The scale will give signal "Beep, beep, beep" to represent negative (-ve) readings when using TARE function.

Auto Power Down

The scale turns off automatically after idle for about 60 seconds.

Switching on/off the talking function

Use the switch on the bottom of the scale to switch on/off the speaker function.

Precautions

1. Do not clean the unit with an abrasive or corrosive compound. It may scratch the plastic and corrode the electronic circuitry.
2. Do not overload the scale. Not to place anything that weighs more than 3000g on the platform, or it will damage the weighing sensor and void the warranty.
3. Do not subject the unit to excessive force, shock, dust, temperature, direct sunlight, heavy rain or humidity. These may result in malfunction, shorter electronic life span, battery damage or distorted parts.
4. Do not tamper with the units internal components. It will invalidate the warranty on the unit and may cause unnecessary battery damage, distorted parts or personal injury.
5. Place product on flat stable surface before use.